


Wiring Diagrams

JETVENT AXIAL 400V THREE PHASE

SINGLE SPEED DIRECT
ON LINE STARTING (STAR)

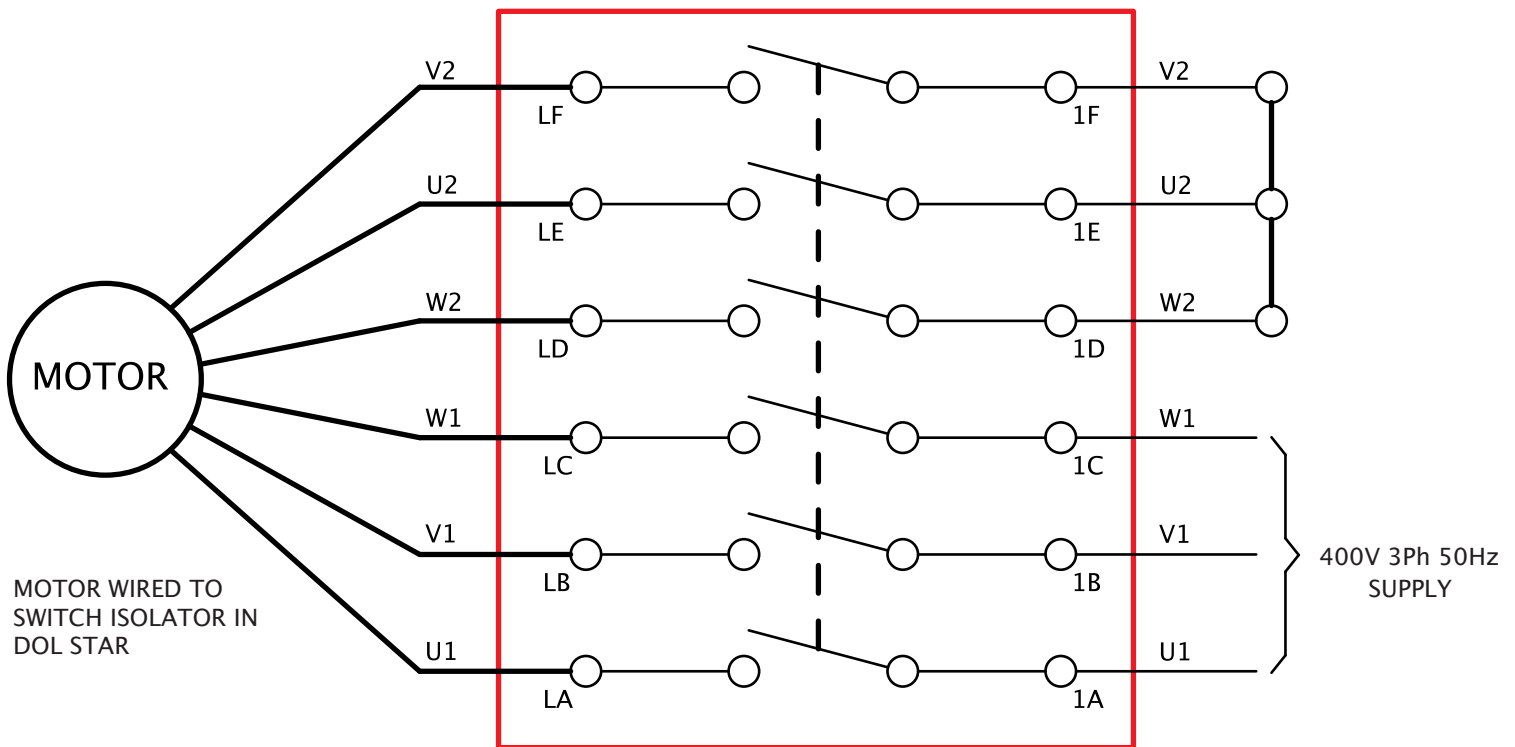

Wiring Diagrams

JETVENT AXIAL 400V THREE PHASE

TWO SPEED SINGLE WINDING MOTORS

